



Post Light

Please provide instructions to your builder/electrician for proper installation. Each post light is equipped with a photoelectric sensor; therefore, no Lot Owner may install a turn-off switch for the post light. **Remember: Always call Diggers Hotline at (800) 982-0299 before you dig.**

Installation Instructions:

The post light for The Conservancy of New Berlin should be installed 35 feet from the back of the curb. It should then be 3 feet to the left or right of the driveway, whichever is closer to the house.

Once installed, the post light should be 10 feet in height from the bottom of the post (after top soil) to the top of the lantern. Please refer to the diagram below for proper footing detail.

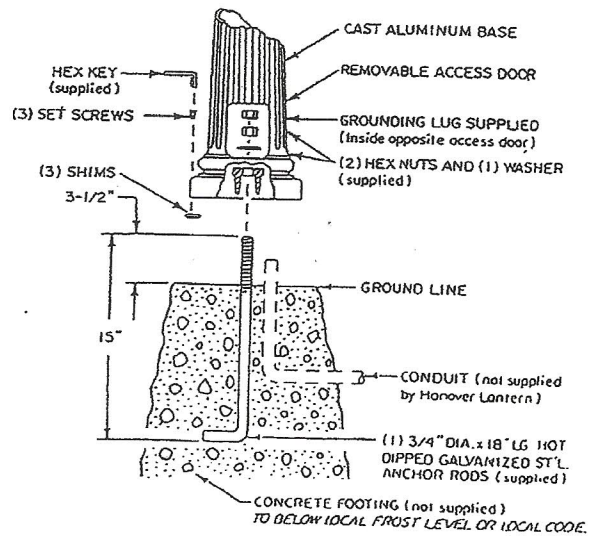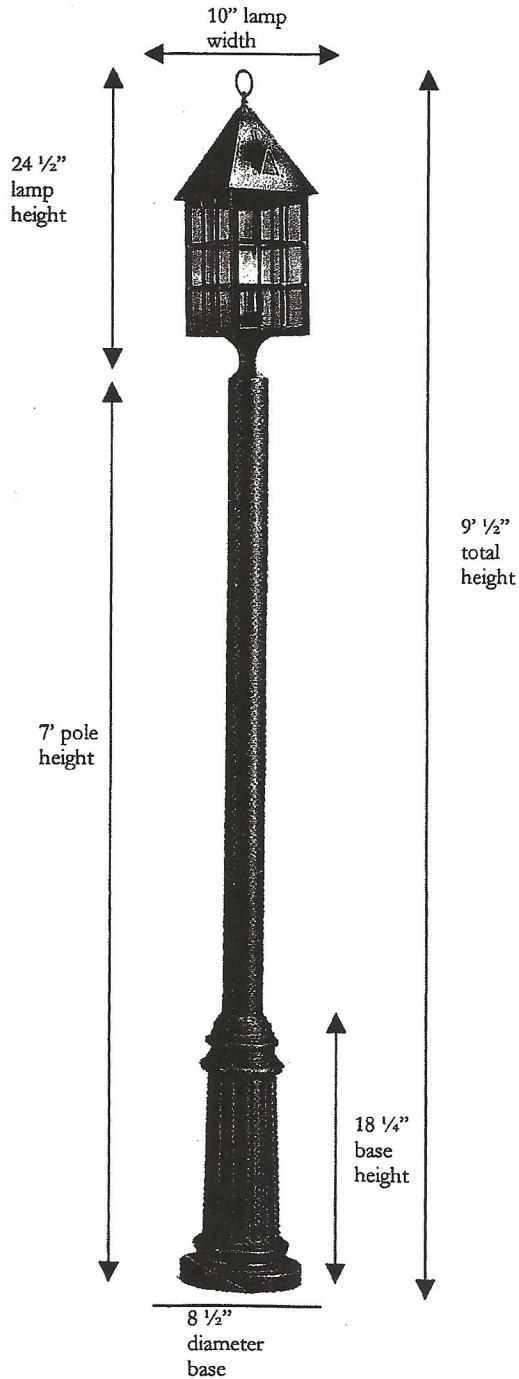




Mailbox

Remember: Always call Diggers Hotline @ (800) 982-0299 before you dig. Feel free to contact David Tanner at (262) 938-4468 with any questions or concerns you may have.

Installation instructions:


The mailbox for The Conservancy subdivision should be located at the end of your driveway and installed per the City of New Berlin specifications: 42 inches from the ground to the bottom of the mailbox, the front of the mailbox shall be flush with the back of the curb, and the address must appear on the mailbox. Please refer to diagrams below for detail.

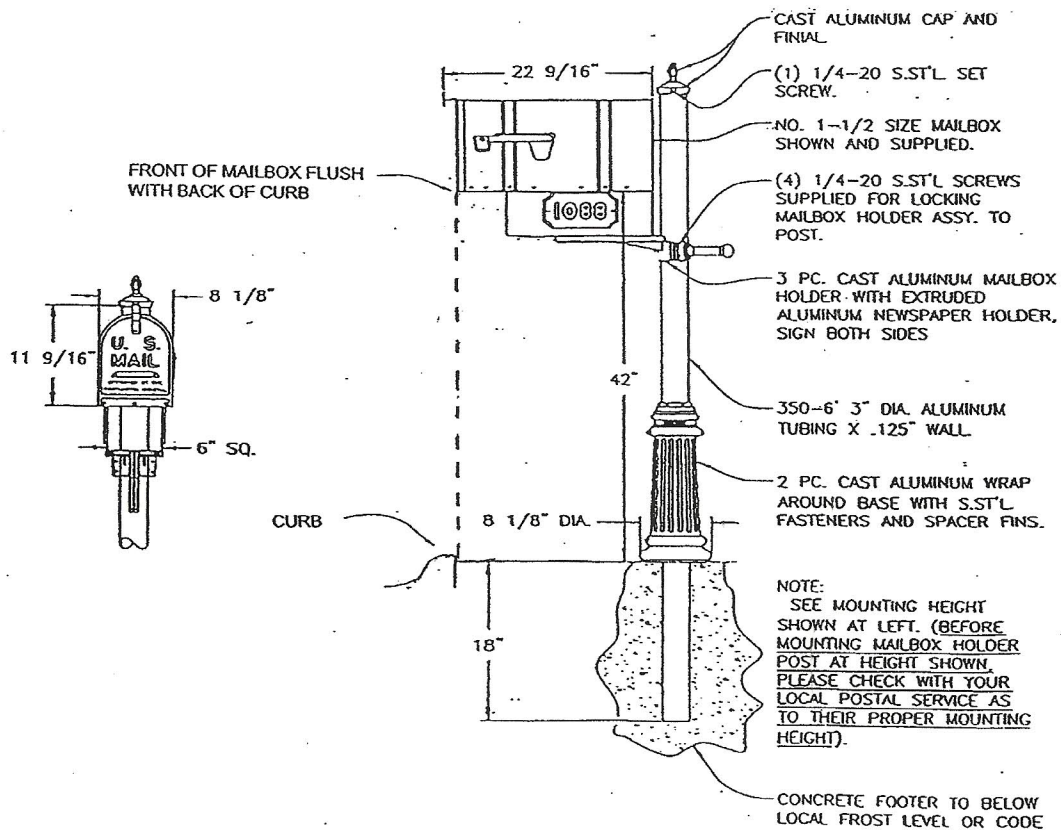


Dear Postal Customer,

Here are suggestions on how you can improve the appearance and upkeep of your mailbox and help the Postal Service deliver the mail safely and more efficiently.

If possible, boxes should be placed on the same post for neatness. Mailboxes should be within 3 inches of each other and at a height of 46 to 48 inches from the bottom of the box to the level part of the pavement. This allows most snow plows to get under the box without hitting the box.

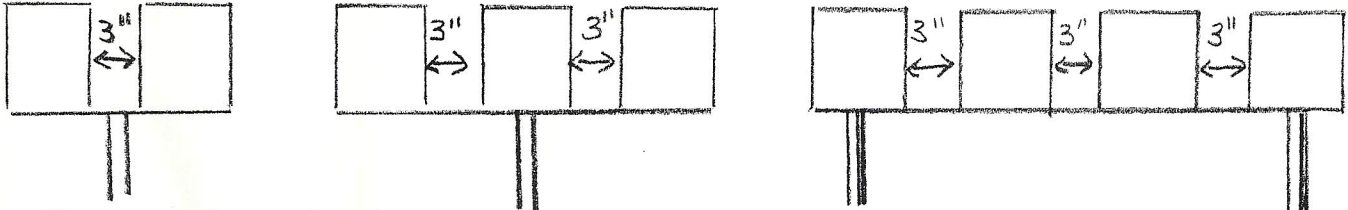


Boxes must be numbered consecutively in the order specified by your local Post Office. Boxes must be labeled with numbers at least 1 inch high, and should be placed where the carrier can see them upon approaching the box. Carrier line of travel →

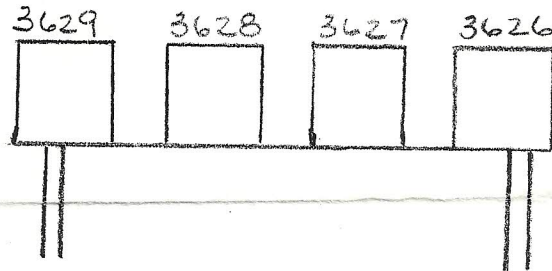


Boxes should be located 6 inches back from the curb of the street to the front of the box. Or if you have a shoulder, then 6 inches back from the level part of where the gravel meets the grass at the end of the shoulder. Again this is to keep the mailbox within reach and hopefully the snowplow away from your box. Accumulation of snow in front of your box may result in non-delivery of your mail.

Area with roads with curbs

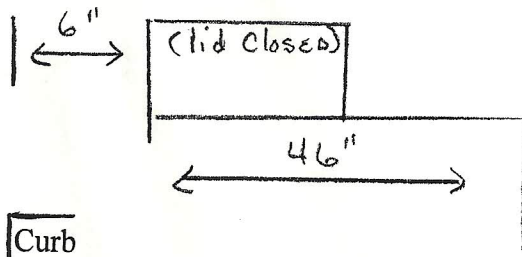

Area with roads and shoulders

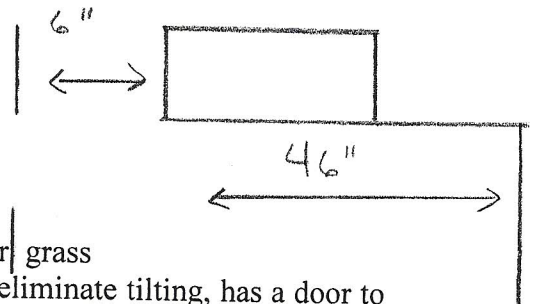

Please be sure your mailbox is firmly planted in stone or concrete to eliminate tilting, has a door to secure the mail, is large enough to handle your average daily volume of mail, and is in good condition to prevent an accident by the carrier delivering the mail.

Please be sure to check with your local postal service for your exact box location, or if you have any questions, or need assistance.

Thank you for your cooperation.